



HP 363 compatible cartridge / HP chip-resetter instruction manual

The Digital Revolution HP 363 cartridge consists of a microchip and an ink tank. This microchip can be re-used if the cartridge is empty. You only need to replace the ink tank and reset the chip with our HP chipresetter. So save even more money and only buy the complete cartridge + chip once.

Digital Revolution HP 363 product range:



- **cartridges with chip**

These high capacity cartridges with chip can be used instantly. Don't throw them away when they are empty! You need the chip to be able to use the separate ink tanks. This way you need only buy a complete cartridge + chip once (for each colour).



- **individual ink tanks**

These are cartridges without the microchip. Remove the chip from the old Digital Revolution cartridge and reset it with the HP chipresetter. Place the chip onto the individual ink tank and the cartridge is ready to use.



- **HP chip resetter**

The HP chip resetter is suitable for all Digital Revolution HP 363 chips. You cannot use this resetter for original HP cartridges.

Reset the chip in 3 simple steps:

Step 1:

Remove the chip from the bottom of the empty cartridge.



Step 2:

Insert the chip into the chip holder and press with your finger.



Step 3:

A LED will blink red several times and then change to green after a few seconds. The chip is now reset.

Place the chip on the replacement ink tank and your cartridge is now ready to use.

