

Recommended printer settings

To get the best results it's important to use the right printer settings. Usually more than one type of settings can be used as a print result can be assessed differently. The user can try different settings and choose what suits best.

Matt photo paper

Brand	Canon	Epson	HP
Paper type	High Resolution Paper	Archival Matte Paper/ Photo Quality Ink Jet Paper	Premium inkjet paper
Print quality	High	Best Photo	Best
Alternatives	Auto	Photo Enhance	

Cast coated glossy-finish photo paper

Brand	Canon	Epson	HP
Paper type	Glossy Photo Paper/ Photo Paper Plus Glossy	Premium Glossy Photo Paper/Paper	Premium Plus Photo Paper/ Premium photo paper
Print quality	High	Best Photo	Best
Alternatives	Auto	Photo Enhance	

Cast coated satin-finish photo paper

Brand	Canon	Epson	HP
Paper type	Glossy Photo Paper/ Photo Paper Plus Glossy	Premium Semigloss Photo Paper	Premium Plus Photo Paper/ Premium photo paper
Print quality	High	Best Photo	Best
Alternatives	Auto	Photo Enhance	

Microporous glossy-finish photo paper

Brand	Canon	Epson	HP
Paper type	Photo Paper Pro / Photo Paper Plus Glossy	Premium Glossy Photo Paper	Advanced Photo Paper/ Premium Plus Photo Paper
Print qualtiy	High	Best Photo	Best
Alternatives	Auto	Photo Enhance	

Microporous satin-finish photo paper

Brand	Canon	Epson	HP
Paper type	Photo Paper Pro / Photo Paper Plus Glossy	Premium Semigloss Photo Paper	Advanced Photo Paper/ Premium Plus Photo Paper
Print quality	High	Best Photo	Best
Alternatives	Auto	Photo Enhance	